



User Manual

i.DEER

Series A2

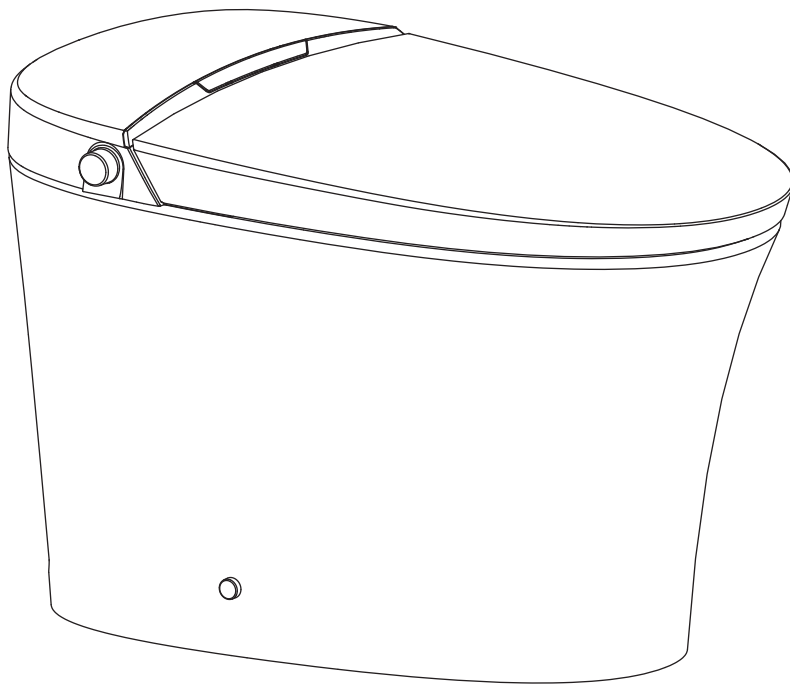

Compliance with
cUPC [Uniform Plumbing code]
EGS [IAPMO – Electrical Product]

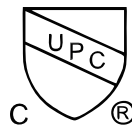

UL 1431
CSA C22.2
us Nos.64 and 68

www.ideer.land


Table of Content

Toilet Schematic	01
Remote Guide	02
Rear/Front washing	03
Drying/Dryer temperature	03
Water volume adjustment	04
Nozzle position adjustment	04
Energy saving	04
Water temperature adjustment	04
Seat temperature adjustment	05
Night light	05
Full flush/Half flush	05
Other operations	06
User code	07
Knob function	08
Maintenance	10
Emergency Solutions	11
Product Limited Warranty	14


Thank you for choosing our product. Please read the instructions carefully before initial use and keep it available for future maintenance or reference.

Toilet Schematic


Left View

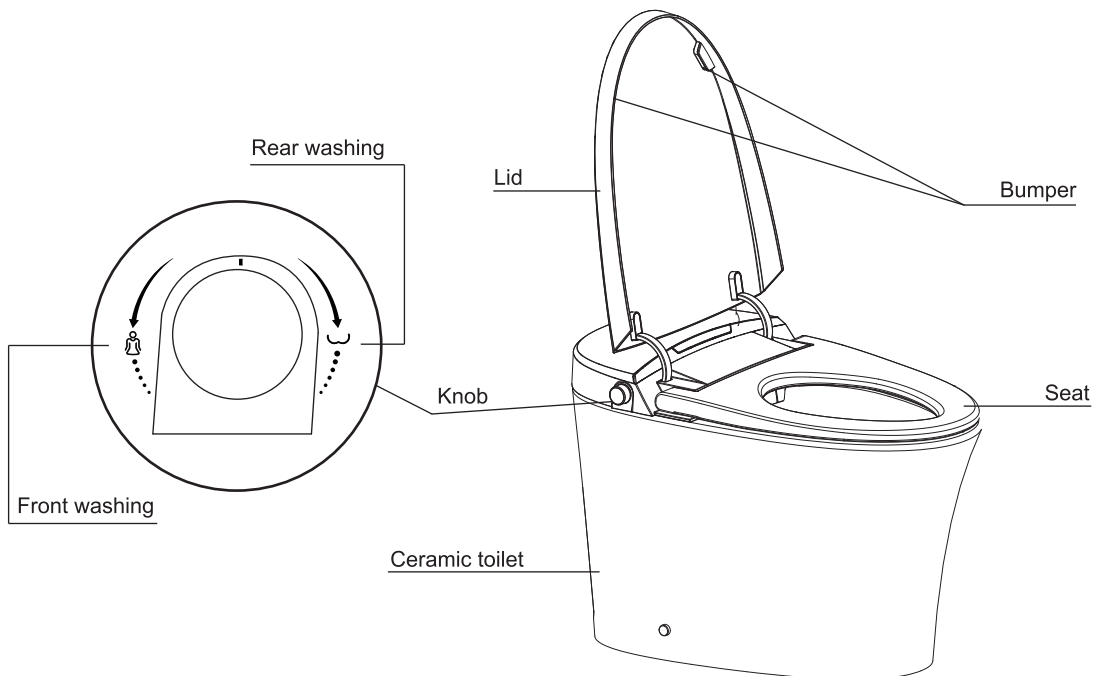

Right View

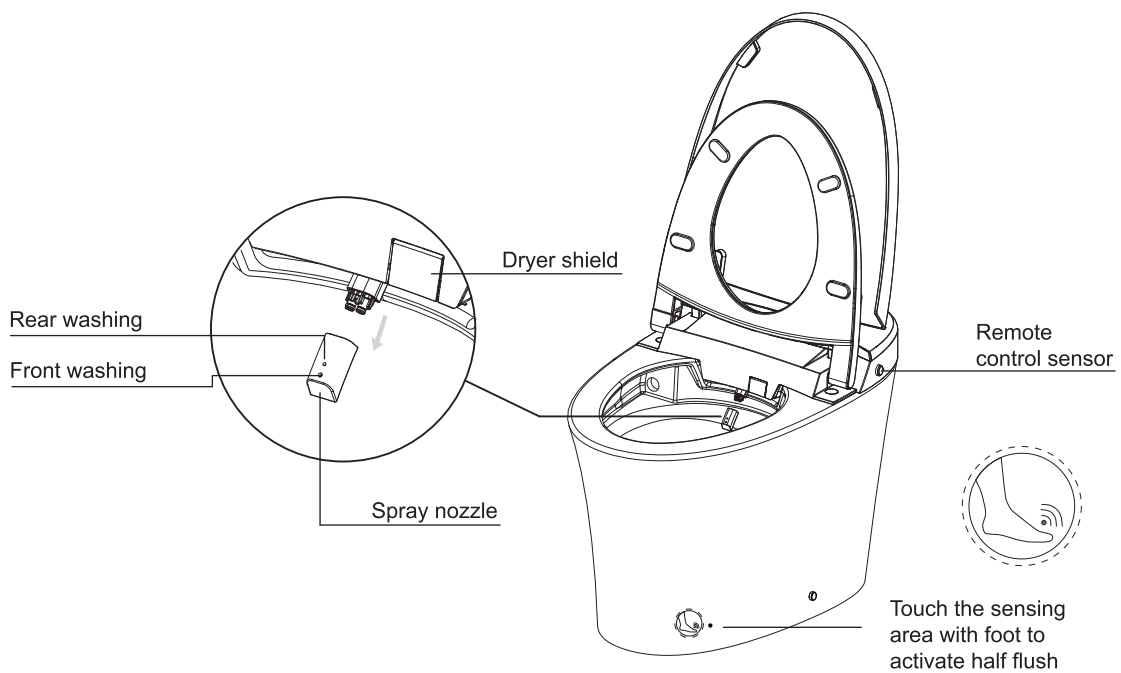

Remote Guide

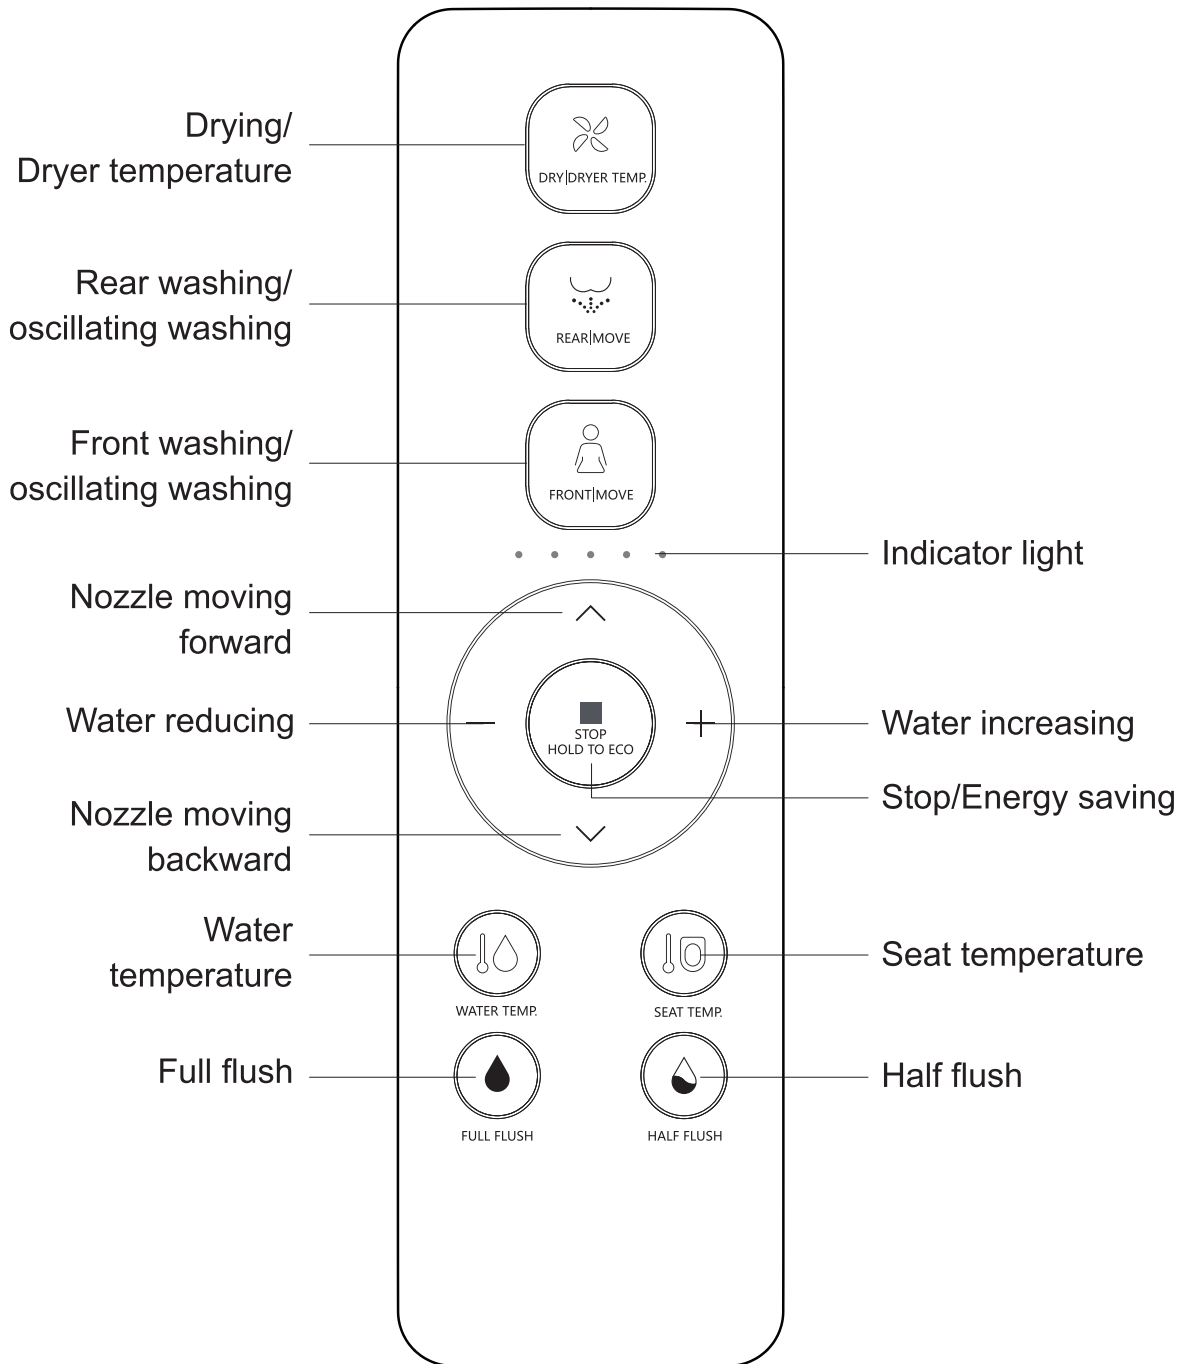

Remote Usage Instruction

Notice :




Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.

Please sit backward on the seat for correct washing position and to avoid splashing.

The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press "STOP" button before standing up.




REAR | MOVE



Press "  " button, the indicator light is on showing current water temperature level, it starts rear washing; Press again "  " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses "  " button.


FRONT | MOVE




Press "  " button, the indicator light is on showing current water temperature level, it starts front washing; Press again "  " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses "  " button.

DRY | DRYER TEMP



Press "  " button, the indicator is on, showing the current air temperature level. It will stop drying automatically after one cycle or after leaving.

Under drying, press "  " button to adjust the air temperature between 0-5 level, and the indicator light is on showing the air temperature level. When the indicator light is off, the temperature is at level 0 (room temperature).

○ ○ ○ ○ ○
Room
temperature

● ○ ○ ○ ○
Level 1

● ● ○ ○ ○
Level 2

● ● ● ○ ○
Level 3

● ● ● ● ○
Level 4


● ● ● ● ●
Level 5

Water volume adjustment


Press " + " or " - " button when it is under function of Rear Washing or Front Washing, the indicator light is on showing current water volume level, and water volume can be adjusted.

Nozzle position adjustment

Press " ^ " or " v " button when it is under function of Rear Washing or Front Washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.

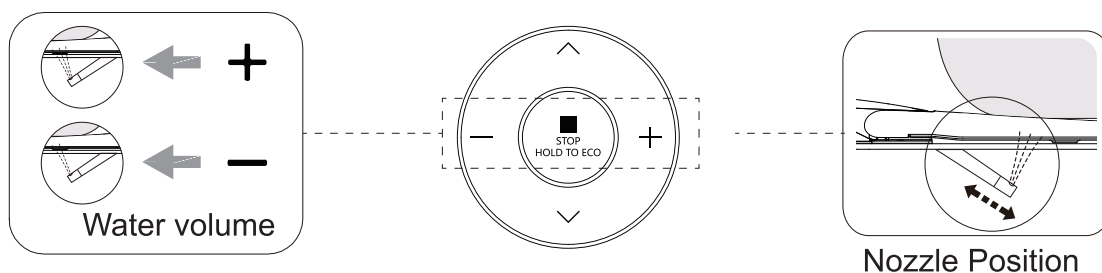

Energy saving

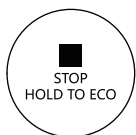

Long press " ■ " button to enter energy saving mode, long press " ■ " button again to exit energy saving mode.

Under energy saving mode, seat temperature is set to Level 1 for energy saving. (Note: If the seat temperature before energy saving is neutral, then it will be neutral as well.)

Remark:

Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

Water temperature adjustment



Short press " 🌡️ " button to adjust the water temperature between 0-5 level. The indicator light is on showing current water temperature level. When the indicator is off, the temperature is at level 0 (room temperature).

○ ○ ○ ○ ○
Room
temperature

● ○ ○ ○ ○
Level 1


● ● ○ ○ ○
Level 2

● ● ● ○ ○
Level 3

● ● ● ● ○
Level 4

● ● ● ● ●
Level 5

Seat temperature adjustment

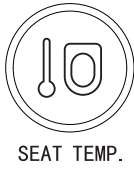

Short press "🪿" button to adjust the seat temperature between 0-5 level. The indicator light is on showing current seat temperature level. When the indicator is off, the temperature is at level 0 (room temperature).



Night light

Change Night light mode : Long press "💧" button to manual mode (turn on/turn off night light)

Intelligent mode: Long press "🪿" button to enter into intelligent mode (Night light will be adjusted base on surrounding.).

If the product is on intelligent mode, long press "💧" button to exit intelligent mode. (Factory setting: intelligent mode)

Half flush / Full flush





Short press "💧" button, the toilet starts half flushing.

Short press "💧" button, the toilet starts full flushing.

Long press "💧" button to turn on/off auto flush function.




When the auto flush function is turned on, toilet will automatically flush after detecting user leaving the seat.

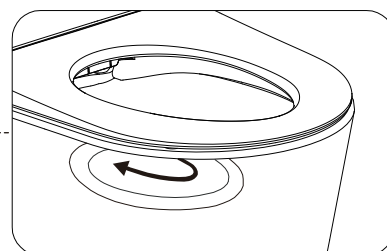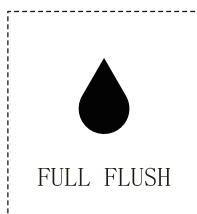


Other operations


Quiet mode

Press and hold the " ■ " button and press the "  " button to turn on/off quiet mode.


Automatic pre-wetting function

Press and hold " ■ " button and press "  " button to turn on or off automatic pre-wetting function. After the automatic pre-wetting function is turned on, the pre-wetting function will be performed when the user is detected to be seated. (Only for the toilet with automatic pre-wetting function.)

Auto deodorization

Press and hold " ■ " button and press "  " button to turn on/off auto deodorization function. The deodorization function will be automatically turned on when the user is seated, and will stop after user leaves. Under drying, deodorization will stop. (This function is turned on by default.)

Foot sensor function

Long press "  " button to turn on/off foot sensor function. Foot sensor is deactivated when the user is seated.

User code


IR remote control

Power on the toilet and the self-inspection starts. It beeps once when the self-inspection completes.

Press and hold " ■ " button, then press " 🚽 " button, the indicator light will flash.

Press the Pressure " + " or " - " button to select user 1-9 (as shown below). The indicator light displays the corresponding user code and flashes.

Press " ■ " button, then press " 🚽 " button. The main unit beeps once, indicating that the remote control and the toilet are matched successfully.

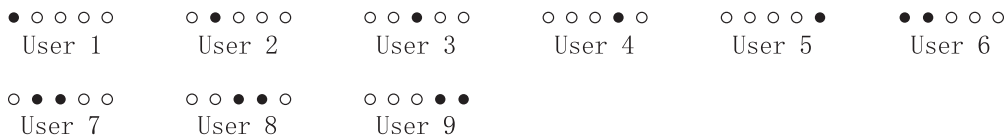

Remark:


The buzzer will "BEEP" once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.

In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.

Knob function

When seated, turn the knob clockwise to start rear washing function, and turn counterclockwise to start front washing function. Rear and front washing function will automatically enter into the drying function after completion.


Note: default water pressure, water temperature, air temperature, seat temperature, wand position are intermediate.

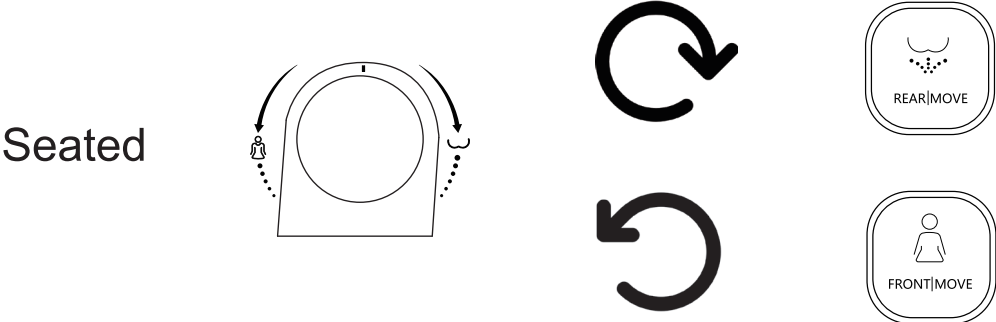

When no one is seated, turn the knob clockwise to start manual cleaning function of the nozzle.




During rear and front washing, turn the knob clockwise to move the spray wand forward, and counterclockwise to move the spray wand backward;

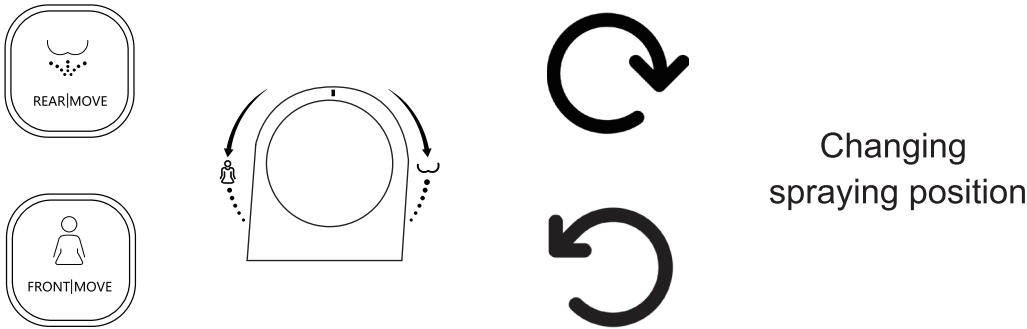


During front and rear washing, long press the knob to switch to the water pressure adjustment function. Clockwise rotation increases the water pressure, while counterclockwise rotation decreases the water pressure.

Note:

During washing, long press the knob to switch between the functions of water pressure adjustment and spray wand position adjustment.

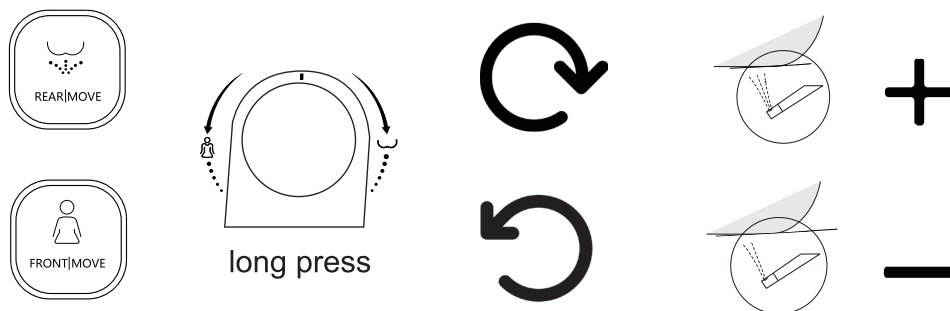

During drying, clockwise rotation increases air temperature and counterclockwise rotation decreases air temperature.

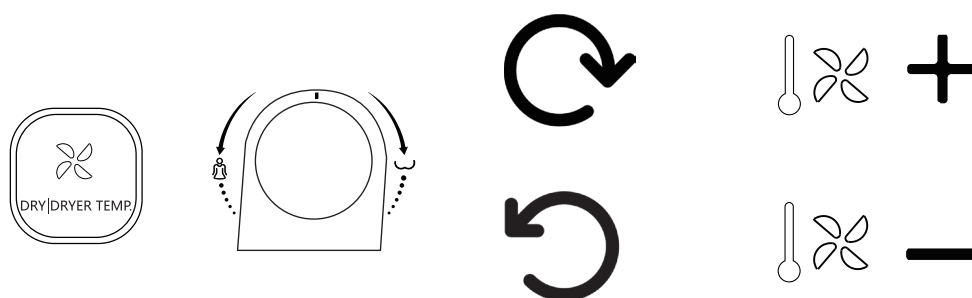

In functional mode, press the knob to stop function in progress: rear washing, front washing, drying or nozzle cleaning. In addition, press the knob to flush the toilet.

To change between standby and functional mode, press and hold the knob.

Below shows the indicator light status:

Functional mode: White light;

Energy saving mode: Breathing light;

Standby mode: Light off.

* Restart the toilet will reset all the functions.

Use remote control to switch to the function level set before.


Maintenance

Main unit care and maintenance



1. Shut off power supply before doing maintenance.
2. Use only a soft, damp cloth to clean. Avoid using harsh chemicals.
3. Once cleaning is completed and all surfaces are dry, re-connect the power plug.

Spray nozzle maintenance and care

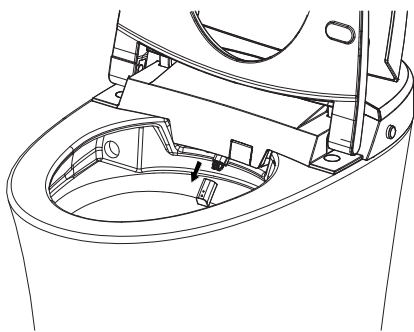


1. When no one is seated, turn the knob clockwise. The nozzle will automatically stretch out to allow access for cleaning.

2. When the nozzle moves forward, the nozzle can be removed and cleaned separately.

3. Use only a soft cloth or soft brush to clean. Do not pull or push the wand, to avoid damage.



4. Put the nozzle back and short press the knob to return the spray wand to its normal position.

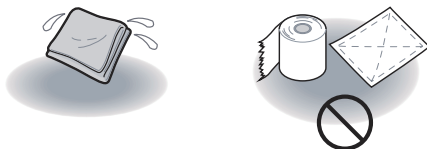

Filter maintenance

If poor spray performance occurs under normal conditions:

1. Turn off power and the angle valve
2. Unscrew angle valve nut
3. Remove filter net

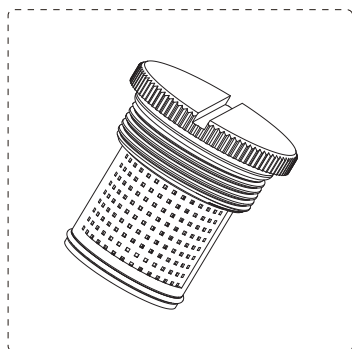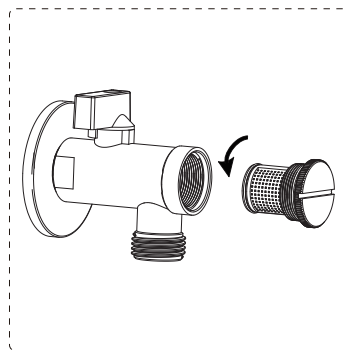

4. Clean out the filter net under running water using a toothbrush
5. Reinstall filter and angle valve nut.
6. Turn on the angle valve and connect power.


Emergency solutions

Power and water failure


1. No water

Put around 2.1Gal (8L) water into a barrel to flush the ceramic bowl.

Note: Avoid water spilling from bowl.

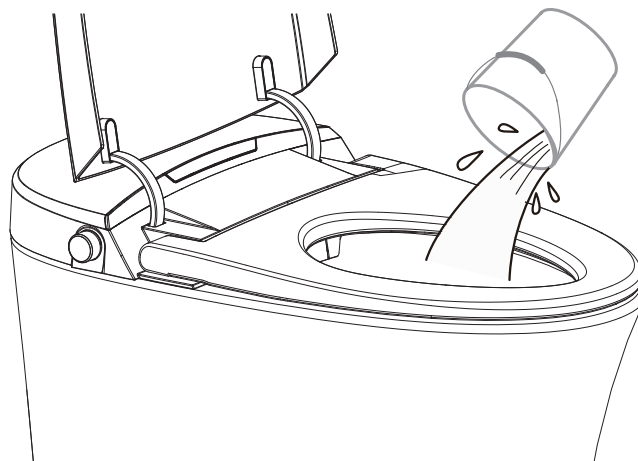

Failure of remote control

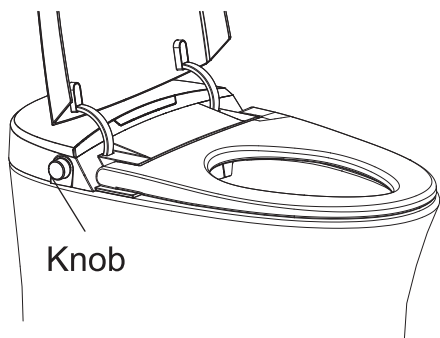




1. Operate via knob on the main unit.
2. Battery replacement
 - Remove the remote control from holder.
 - Open the battery cover and replace the batteries.
 - Put the remote control back.

Note:

After battery replacement, the remote control settings will be restored to the defaults. Please reset.

Toilet with power off flush function.

1. No power
 - Long press knob on the main unit to flush.
2. Battery replacement
 - Unplug DC connector and remove the battery box.
 - Install a new 9V alkaline battery.
 - Reconnect battery box and put it back.

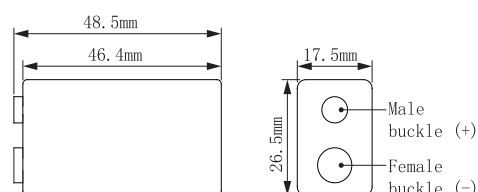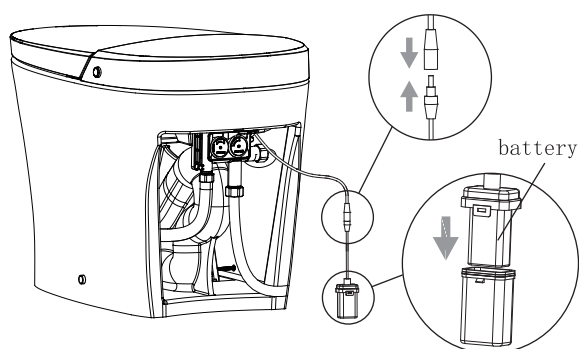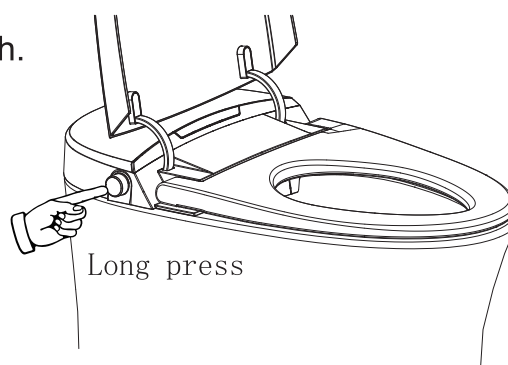

Note:


1. It is recommended to hire professional personnel for this operation.
2. It is recommended to use 9V high-quality dry battery, such as models 6LR61 or 6F22.
3. It is recommended to replace the battery every two years, otherwise there may be a risk of leakage.

Product unused for a period of time

When the product is left unused for a long time, especially in cold weather, it is highly recommended to drain the water to prevent freezing.

To discharge water

1. Activate flushing, and then turn off angle valve to stop water supply.
2. Unplug and cut off the electricity
3. Disconnect the hose from angle valve, drain the water and reconnect.
4. For your safety, it is recommended to put antifreeze into the remaining water in the bowl.

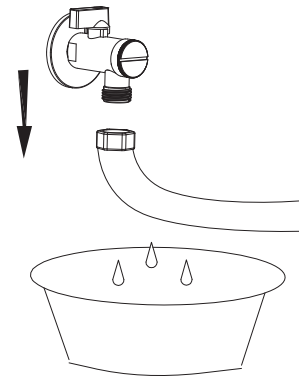

* Please turn on power and water supply when using again.



Note: Before water discharging, the power must be cut off!

The picture of product may not entirely consistent with actual appearance and color because of product improvements, please in kind prevail.

Product Limited Warranty

I.DEER Smart Bidet Toilet B5 Series Three Year Limited Warranty

I.DEER Trading Inc (I.DEER) warrants its toilets with integrated cleansing functionality (“Smart Bidet Toilets”) to be free of defects in material and workmanship during normal residential usage for three (3) years from date of purchase. This warranty applies only to I.DEER products purchased and installed in North America.

I.DEER will, at its election, repair, replace or make appropriate adjustment where I.DEER inspection discloses any such defects occurring in normal usage. Damage caused by accident, misuse or abuse is not covered by this warranty. Improper care and cleaning will void the warranty.* Proof of purchase (original sales receipt) must be provided to I.DEER with all warranty claims. I.DEER is not responsible for removal, installation, labor charges, or other incidental or consequential costs. In no event shall the liability of I.DEER exceed the purchase price of the product.

If you believe that you have a warranty claim, contact I.DEER, either through your Dealer, Plumbing Contractor, Online E-Commerce Platform or by contact I.DEER through its website www.ideer.land. Please be sure to provide all pertinent information regarding your claim, including a complete description of the problem, the product, model number, the date the product was purchased and from whom the product was purchased. Also include your proof of purchase (original sales receipt).

I.DEER AND/OR SELLER ARE PROVIDING THESE WARRANTIES IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. I.DEER, AND/OR SELLER DISCLAIM ALL LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some jurisdictions do not allow limitations of how long an implied warranty lasts or the exclusion or limitation of such damages, so these limitations and exclusions may not apply to you. This warranty gives the consumer specific legal rights. You may also have other rights that vary from jurisdiction to jurisdiction.

Never use cleaners containing abrasive cleansers, ammonia, bleach, acid, waxes, alcohol, solvents or other products not recommended for stainless steel or polypropylene plastic. This will void the warranty.

Thank you for choosing I.DEER products

Customer Service

Email: support@ideer.land

Phone: [949] 294 8030

ASVFAF0450001A-1.0